





0 ppm



100 ppm



200 ppm




400 ppm

QAC QR TEST STRIPS

1. Dip strip into solution to be tested for 1 - 2 seconds.
2. Compare strip to color chart within 10 seconds.



Franklin Machine Products
Lumberton, NJ 11104

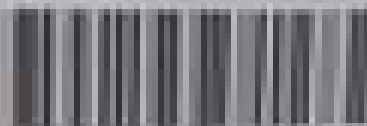

* 1 4 2 1 3 6 3 *

